



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2011 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 04/25/11)



SCC200

Vintage Collection™ Old Fashioned Snow Cone Cart

Instructions and Recipes

IMPORTANT PRECAUTIONS

1. NEVER immerse in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. NEVER try to force the cover in the locking mechanism.
7. Unplug unit from outlet when not in use and during cleaning.
8. DO NOT operate this appliance with a damaged cord or plug, or if the appliance ever malfunctions.
9. DO NOT clean any parts of this appliance in a dishwasher.
10. Keep out of reach of children.
11. This appliance is NOT A TOY.
12. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
13. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions before operating this appliance.
2. Keep hands away from blade mechanism. Use handles or knobs.
3. Avoid contact with moving parts. NEVER put fingers or utensils into feed or discharge areas.
4. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
5. Close supervision is necessary when any appliance is used near children.
6. Unplug from outlet when not in use, before removing parts and before cleaning.
7. DO NOT operate any appliance with a damaged cord or plug, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
8. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
9. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
10. DO NOT use outdoors.
11. Position the appliance as close to the outlet as possible

- to prevent injury due to tripping over cord.
12. Extreme caution must be used when moving this appliance.
 13. **DO NOT** use the appliance for other than its intended use.
 14. An appliance that is plugged into an outlet should not be left unattended while in operation.
 15. Check Ice Hopper for presence of foreign objects prior to use.
 16. Blades are extremely sharp. Use with extreme caution.
 17. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
 18. Longer detachable power supply cords can be used if care is exercised in their use.
 19. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
 20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS!

INTRODUCTION


The OLD FASHIONED SNOW CONE CART marries the best of both worlds: vintage appeal with the convenience of a modern appliance. Use ice cubes from your own freezer to shave and craft refreshing snow cones for any occasion. The handy storage compartment is ideal for storing syrups, extra cones and other supplies. Standing 53" tall, this snow cone cart is perfect for large groups, parties and events such as fundraisers.

With endless flavor varieties, snow cones have always been incredibly fun to eat. Use the machine to create mounds of shaved ice for smoothies, fruit-flavored slushies, other dessert treats, or to chill beverages. See the recipe section of this manual for more fun ideas on how to enjoy your OLD FASHIONED SNOW CONE CART.

Features include:

- Tempered Windows
- Wheels and Cart Handle for easy portability
- Storage Compartment
- Cone Dispenser
- Cone Holder

HOW TO OPERATE

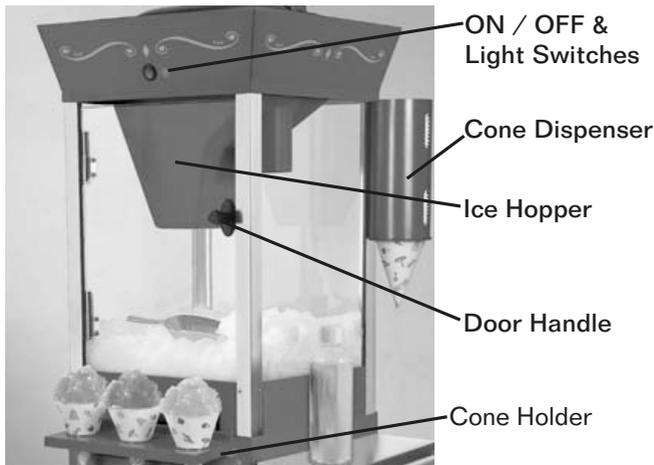

Before first use, clean the inside of the unit by wiping with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel.

1. First, find a flat surface near an electrical outlet before starting. Make sure your cord is away from any water source. It is acceptable to use an extension cord if needed.
2. Before plugging in the unit, add ice cubes by removing the clear lid from the Main Unit of your OLD FASHIONED SNOW CONE CART. To remove the lid, simply push the release button on the lid, lift and remove.
3. Plug in the appliance while switch is flipped to OFF position.
4. When ice cubes are ready, place cubes in the shaving unit while allowing enough room for the lid to be placed back on the unit easily. Never force it shut.
5. Return the clear lid to the unit and turn the power button to the ON position. This will activate the unit to begin shaving. Please note that the ice will not shave unless the lid is properly secured.
6. Repeat steps 2 and 3 until you have shaved the amount of ice desired. Turn unit OFF and then unplug when you are finished.
7. Once you have the desired amount of ice, open the housing door on the Main Unit to retrieve your ice and create your favorite snow-based treats!